

# Demo Mode Restrictions

When using this software in demo mode, certain restrictions apply.

## Viewing Limitations

Users will be unable to:

- View more than **150 addresses** in ladder in address mode.
- View more than **25 networks** in ladder in network mode.
- View more than **25 lines** in **Special Function** programs and subroutines.
- View more than **10 Special Function** programs and subroutines, alarms, and loops.

## Functional Limitations

Users will be unable to:

- **Transfer/load** programs.
- **Transfer/load by Parts**.
- **Save**.
- Insert more than **25 networks** in network mode.
- Insert more than **25 lines** in **Special Function** programs and subroutines.
- Edit more than **10 Special Function** programs and subroutines, alarms, and loops.
- **Print** more than viewable parts as specified.
- Update the **Data Window** beyond 10 minutes.

- Update **Ladder Status** beyond 10 minutes.
- **Search** for addresses beyond the viewable area in ladder and **Special Function** programs and subroutines.
- Perform a **Goto** beyond the first **25 networks** or **Special Function** program and subroutine lines in the **Cross Reference Window**.